

## Quick Reference for the 5110XM

This document provides a brief procedure for performing some common system functions using optional remote keypads.

NOTE: Optional keypads may be used in conjunction with the control panel's LED indicators and SILENCE/RESET switch.

For detailed procedures and additional functions, refer to your User Guide N8028V2, dated 3/10.

ACTION	PROCEDURE
<b>Silencing Sounders</b>	Code + [OFF] or press Silence/Reset button
<b>Resetting Smoke Detectors and Clearing Alarm Memory</b>	Code + [OFF] or press Silence/Reset button Twice
<b>Bypassing Zones (Installer only function.)</b>	Code + [BYPASS] + Zone number(s)
<b>Un-bypassing Zones (Installer only function.)</b>	Code + [BYPASS] + Zone Number(s)
<b>Fire Walk Test Mode</b>	Installer Code + [#] + [68] To exit, Code + [OFF]
<b>Fire Drill Mode</b>	Installer or User 2 Code + [#] + [69] To exit, Code + [OFF]

IN CASE OF TROUBLE, CONTACT:

Installer Name: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

Phone Number: \_\_\_\_\_

This Document Must be Framed and placed adjacent to the operating control panel.

# Honeywell

2 Corporate Center Drive, Suite 100  
P.O. Box 9040, Melville, NY 11747

Copyright © 2010 Honeywell International Inc.

[www.honeywell.com/security](http://www.honeywell.com/security)

